

M10R KLE

SIP DECT 4-Line Rugged Handset

Quick Installation Guide



For Support: Email to: Support@CALL7.com

Call: 1-833-567-8777 press 3 for Support

About this Guide

This quick installation guide provides a reference for the external features of the M10R KLE SIP DECT 4-Line Rugged Handset and installation instructions.

The M10R KLE SIP DECT 4-Line Rugged Handset is for use with the M100 KLE SIP DECT 4-Line Base Station or a compatible SIP deskset. Please refer to the M10R KLE SIP DECT 4-Line Rugged Handset User Manual for complete operation instructions with the base station.


For customer service or product information, visit our website at www.snomamericas.com.

Parts Checklist

Your telephone package contains the following items. Save your sales receipt and original packaging in the event warranty service is necessary.



Quick Installation
Guide

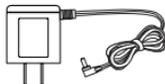

Handset charger
DC adapter



Handset




Handset battery and
battery compartment
cover




Handset charger

Quick Reference Guide

Cordless handset external features

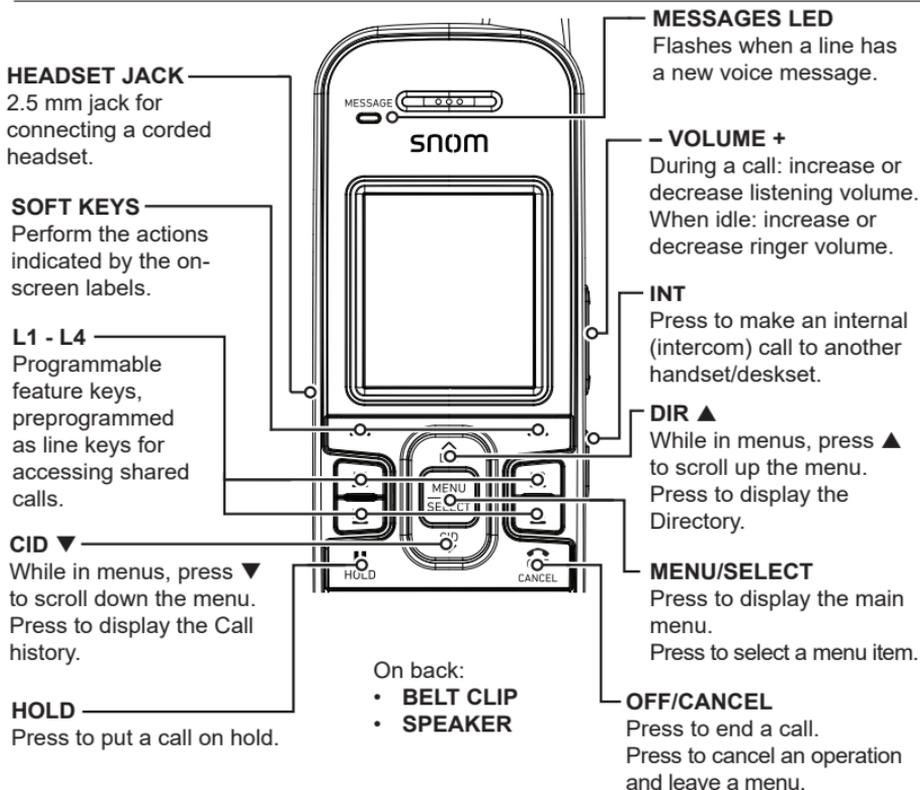

Dial pad and audio controls

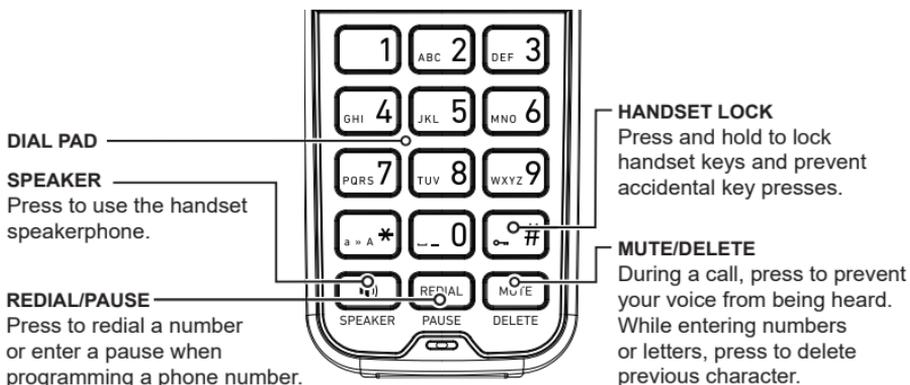

Handset Installation

This section assumes that your network infrastructure is established and that your IP PBX phone service has been ordered and configured for your location.

Installation involves both the the handset and the handset charger. The handset charger is powered using the supplied power adapter. The charger can be placed on a flat surface or mounted on a wall.

Avoid placing the handset and charger too close to:

- Communication devices such as television sets, DVD players, or other cordless telephones
- Excessive heat sources
- Noise sources such as a window with traffic outside, motors, microwave ovens, refrigerators, or fluorescent lighting
- Excessive dust sources such as a workshop or garage
- Excessive moisture
- Extremely low temperature
- Mechanical vibration or shock such as on top of a washing machine or work bench

Installing the charger

Install the charger as shown below.



Plug the power adapter into an electrical outlet not controlled by a wall switch.

IMPORTANT INFORMATION

1. Use only the power adapter supplied with this product. To order a replacement power adapter, visit our website at www.snomamericas.com.
2. The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.

Battery installation and charging

Install the battery as shown on the following page. Once you have installed the battery, the screen indicates the battery status (see the table below). If necessary, place the handset in the charger to charge the battery. For best performance, keep the handset in the charger when not in use. The battery is fully charged after 11 hours of continuous charging.

If the screen is blank, you need to charge the handset without interruption for at least 30 minutes to give the handset enough charge to use the telephone for a short time. When the battery is low, the handset shows **Low battery** and a flashing .

Battery indicators	Battery Status	Action
The screen is blank or shows Place in charger and  flashes.	The battery has no or little charge. The handset cannot be used.	Charge without interruption (at least 30 minutes).
The screen shows Low battery and  flashes.	Battery has enough charge to be used for a short time.	Charge without interruption (at least 30 minutes).
Full battery icon () appears.	Battery is charged.	To keep the battery charged, place it in the charger when not in use.

To install the handset battery:

1. Rotate the dial on the back of the handset to the unlock position , and slide the battery cover down to remove it.
2. Plug the battery connector securely into the socket inside the handset battery compartment. Insert the supplied battery with the label THIS SIDE UP facing up as indicated.
3. Align the battery cover flat against the battery compartment, then slide it upwards.



4. Rotate the dial on the back of the handset to the lock position .
5. Charge the handset by placing it face forward in the charger. The battery icon indicates the charge status as the battery charges.

Very low battery charging
less than 30 minutes.



Charging 30 to 80 minutes.



Charging 80 minutes
to 7 hours.



Charging more than 7 hours.
Fully charged at 11 hours.




IMPORTANT INFORMATION

- Use only the supplied rechargeable battery or replacement battery (model BT264392). To order a replacement battery, visit our website at www.snomamericas.com.
- If you do not use the handset for a long time, disconnect and remove the battery to prevent possible leakage.

Adding a corded headset

You can use this handset hands-free when you install any industry-standard 2.5 mm corded telephone headset (purchased separately).

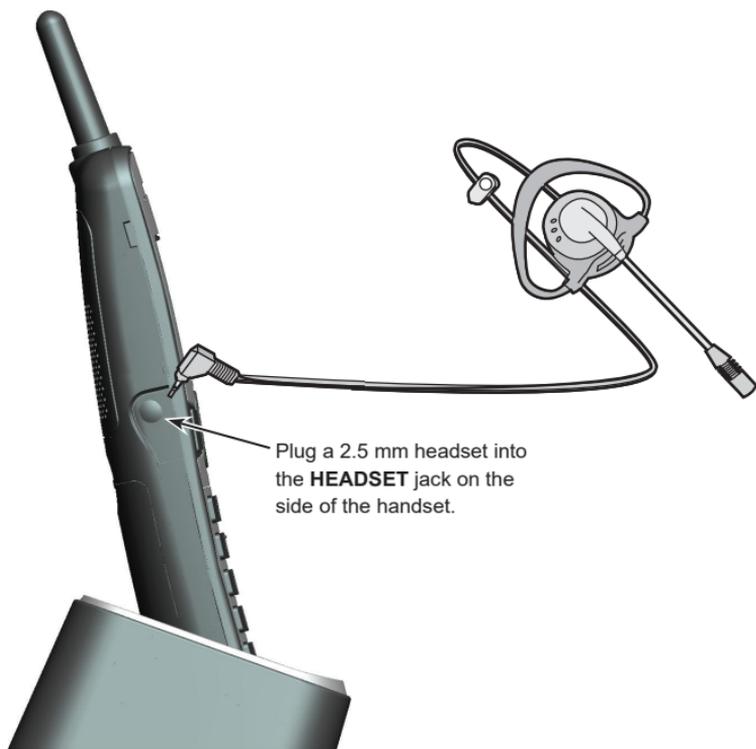


Handset Registration


Registering the handset to the base station


The handset must be registered to the base station in order to make and receive calls.

To register the handset:

1. Make sure the handset has a charged battery before proceeding.
Make sure the base station is connected to power.

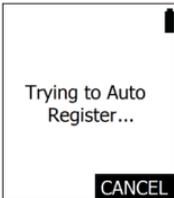2. If the handset is displaying  go to step 6.

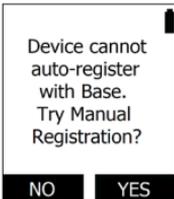
3. If the handset is displaying  go to step 7.

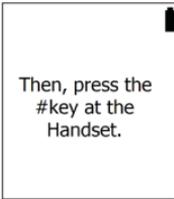4. If the handset is displaying   go to step 8.

5. If the handset is displaying  go to step 7.

6. Press **CANCEL**.

The handset displays the following message:

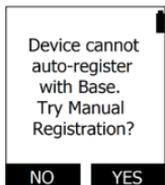

7. Press **YES**.

The handset displays the following message:



8. On the base station, press the **HANDSET LOCATOR** button for at least four seconds, then release the button. Both LEDs on the base station begin to flash.
9. Press the **#** key on the handset to begin registration. The screen displays "Registering Please wait".

The process takes up to 10 seconds to complete. When registration is complete, the handset beeps and displays "Handset Registered".

If the handset fails to register, place it in the charger again for a few seconds, remove it and repeat the registration procedure.

Deregistering the handset

Before using the handset with a different base station, you must deregister the handset from the base station to which it is currently registered.

To deregister the handset:

1. Press **MENU** on the handset. The Main Menu appears.
2. Press **▼** to scroll to **User settings** and press **SELECT**.
3. Press **▼** to scroll to **Registration** and press **SELECT**.
4. Press **▼** to highlight **Deregistration** and press **SELECT**.
The handset screen displays a list of devices registered to the base station.
5. Press **▼** to highlight the name of the handset you want to deregister, and then press **SELECT**.
6. Enter the PIN, and then press **SELECT** to begin deregistration.
The default PIN is 1592.

Deregistration takes up to 10 seconds to complete. When the handset deregisters, it beeps and the screen displays "Handset is deregistered."

Note: The handset enters an energy-saving charging mode after being deregistered. All cordless telephone functions except handset-battery charging are disabled. Energy-saving charging mode is deactivated after the handset registers to the base station.

Maintenance

Taking care of your telephone

- Your base station and cordless handset contain sophisticated electronic parts, so you must treat them with care.
- Avoid rough treatment.
- Place the handset down gently.
- Save the original packing materials to protect your products if you ever need to ship them.

Avoid water

- You can damage your cordless telephone if it gets wet. Do not use the handset in the rain, or handle it with wet hands. Do not install the base station and handset near a sink, bathtub or shower.

Electrical storms

- Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety, take caution when using electric appliances during storms.

Cleaning your telephone

- Your products have a durable plastic casing that should retain its luster for many years. Clean it only with a soft cloth slightly dampened with water or a mild soap.
- Do not use excess water or cleaning solvents of any kind.

Remember that electrical appliances can cause serious injury if used when you are wet or standing in water. If the telephone base should fall into water, **DO NOT RETRIEVE IT UNTIL YOU UNPLUG THE POWER CORD FROM THE WALL**, then pull the unit out by the unplugged cord.

Technical Specifications

RF frequency band	1921.536–1928.448 MHz
Channels	5
Operating temperature	32–104 °F (0–40 °C)
Power requirements	Handset charger: 6.0Vdc 400mA Handset: 2.4V 550mAh, Ni-MH battery pack